

# Completed settings

DC: 1, Outdoor SD    AC: 20, Outdoor HD  
 RF 1    Freq 4.1755    Lvl (35 to 75)    BER 0.0e-8

**End Here** →

Now Press the menu button again.  
 When you see the menu above, use right and left arrow keys to toggle between DC and AC channels. Use the up and down arrow keys to change the DC or AC channel respectively:  
 DC1: Outdoor Channel SD(MPEG audio)  
 DC5: Outdoor Channel SD(AC3 audio)  
 AC20: Outdoor Channel HD(accessible only through ASI out)



After entering all required Menu items, you will see a blinking green light. Hit 'menu', then select 'continue'. The green light will now be steady and you will get a picture.

# Start Here

Move right to Preset/Input, Press select Display

Main Menu  
 Status    Preset/Input    Setup    About    Diag

Arrow down Display

P#    Preset Name    Activate  
 1

Move right, press select on Freq, will display Abort or Continue, Move right to Continue, press select. Enter on the keypad 041755, press select Display

P#    Freq(GHz)    SymRate    FEC    L-band  
 1    3.449    28.3465    Auto    1500.0

Move right, press select on SymRate, Enter on the keypad 20000, press select Display

P#    Freq(GHz)    SymRate    FEC    L-band  
 1    4.1755    20.000    Auto    974.5

**If you need to power the LNB with this unit proceed, if not select Menu**

**Arrow down four screens to:**

Move right, press select on Power, Use arrow up/down until 18, press Select

P#    Freq(GHz)    SymRate    FEC    L-band  
 1    4.1755    20.000    Auto    974.5

RF#    Power    LO Select (22kHz)  
 1    off    LO 1

RF#    Power    LO Select (22kHz)  
 1    18    LO 1

## Outdoor Channel Setup for Cisco Model D9852

Satellite – Galaxy 18  
 Polarity - Horizontal

BER reading  
 1.2e-2 worst signal  
 1.2e-4 good signal  
 0.0e-8 best signal

Technical Support  
 Scientific Atlanta  
 1-888-949-4786 option 2  
 Outdoor Channel  
 1-303-925-2812

**\*Note, if using the ASI output port, please see the supplement, 'D9850&D9852 setup for ASI out'.**